




**GROUND SPACE 7' X 2'
COMMERCIAL
PLAY SPACE 19' X 14'**



Installation Instructions Fence Climber



Top View

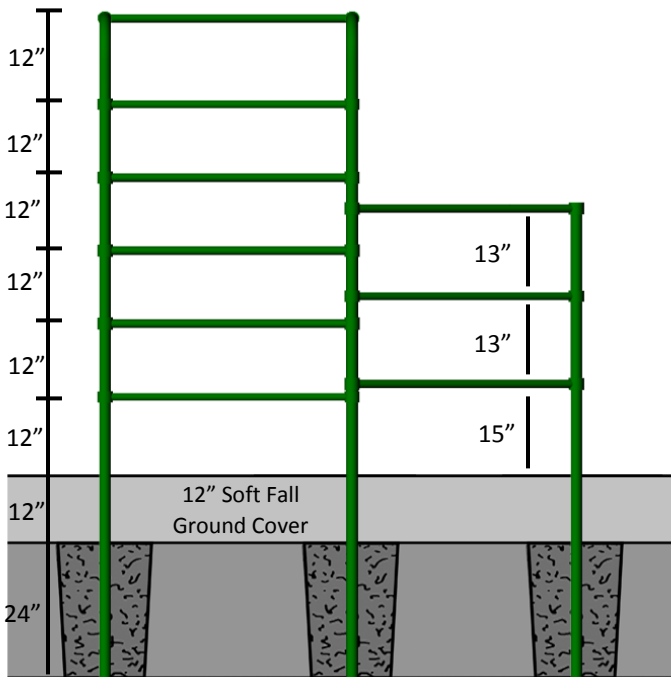

**Hole 24" deep x 18" diameter
(Approx. 3 ½" 80 lb. bags of
concrete mix per hole.)**

1. Lay the vertical bars on the ground in order shown and use a permanent marker to mark where every rung is placed.
2. Sleeve all rungs on and tighten with set screws. Adjust angle of 78" post as shown above in "Top View."
3. Stand Fence Climber up and mark where to dig the holes.
4. Dig holes 24" deep x 18" in diameter.
5. Set the Fence Climber in the holes.
6. Mix and begin pouring cement, level and plum the fence climber as the holes fill.
7. Allow cement to cure for 3-5 days.