





## Installation Instructions Parallel Bars

Note: If you are not installing soft fall ground cover then you must either bury the bars 12" deeper or have them be 48" finished height instead of 36".

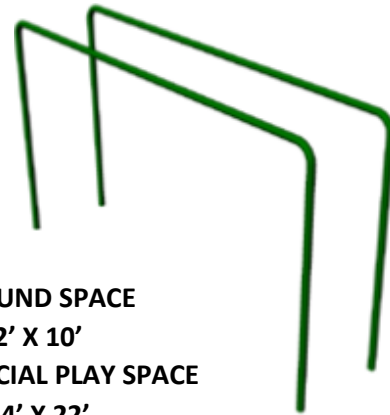

GROUND SPACE  
2' X 10'  
COMMERCIAL PLAY SPACE  
14' X 22'

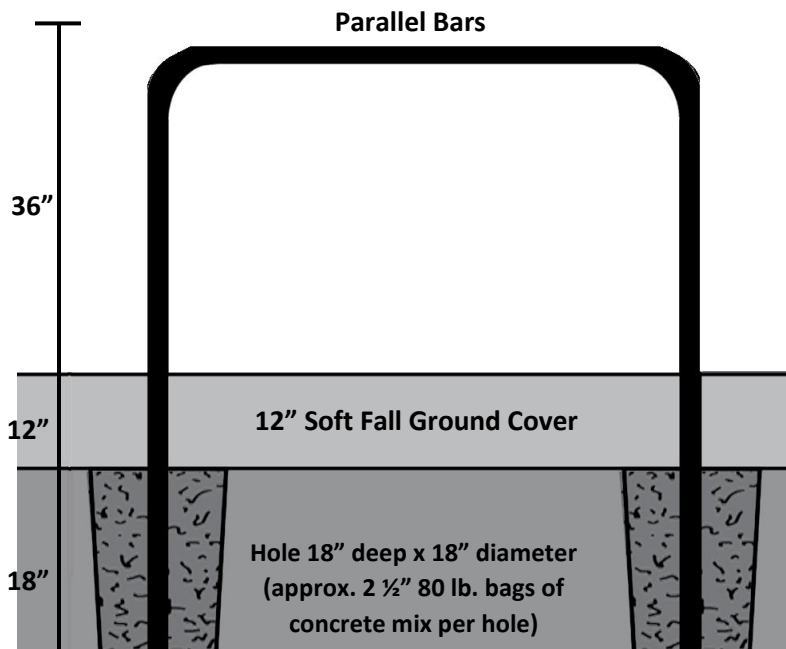

1. Place Parallel Bar on its side in desired location to determine location of holes.
2. Dig holes 18" deep x 18" in diameter
3. Set the Parallel Bar in the holes.
4. Mix and begin pouring cement, level and plum the Parallel Bar as the holes fill.
5. Repeat with second bar approx. 24" away (or preferred distance) running parallel.
6. Allow cement to cure for 3-5 days.